SUMMIT HANDPIECE EXPRESS

WHEN IT COMES TO YOUR HANDPIECES, WE KNOW THE DRILL!

www.SummitHandpieceExpress.com

Maintenance & Sterilization Guidelines

HIGHSPEED HANDPIECES

1. After every use, unscrew handpiece from tubing
2. Over the sink, spray a shot of lubricant into the intake tube at the base of the handpiece. It's the smaller of the 2 tubes
3. Wipe off excess lubricant from handpiece
4. Install a bur and run for 30 seconds or until all excess oil exits the head
5. Insert into Autoclave bag and load sterilization trays – paper side up
6. Allow handpieces to dry in bags – paper side up

**ALWAYS lubricate handpieces prior to autoclaving.*
Do NOT lubricate the handpiece after sterilization.

"Lube Free" Highspeed Handpieces: Lube Free Highspeed handpieces do not require lubrication. However, because no lubrication is being used, the turbine and housing O-rings eventually dry out and shrink causing turbine failures. The housing will eventually leak air and water. When this occurs, send the handpiece in for service.

Questions? Call 877.342.0101

LOWSPEED HANDPIECES

Motors – A few drops of oil before every autoclave. Place lubricant in smaller of the 2 large holes

Latch Angles – A few drops of oil before every autoclave

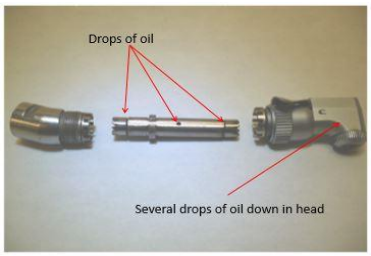

Straight Nose Cones – use high speed spray into nose cone to lubricate and prevent corrosion build up

Servicing ALL makes and models of Highspeed, Lowspeed, Electric & Surgical handpieces!